



Filter Maintenance


Model 475 & 675



1. Service filters every 6 months or when the filter indicator turns red.



2. Rotate the valve on the instrument panel to "OFF".

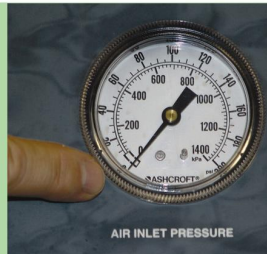

*** NOTICE ***
3. Wait for the air inlet gauge to read 0 PSI.



4. Using a coin or screwdriver, rotate each panel lock.



5. Remove the front panel.



6. The left filter is the particulate filter. The right filter is the coalescing filter.



7. Loosen the particulate canister .



8. Remove the canister from the particulate filter



9. Unwind the steel mesh wrap...



10 ...and remove it from the filter tube.



11. Wash the steel mesh wrap in soap and water.



12. Re-wrap the steel mesh tightly around the filter tube.



13. Re-install the filter canister.



14. Hand tighten the filter canister.

See reverse side for instructions on changing the coalescing filter element.

Filter Maintenance, cont. Model 475 & 675



15. The right filter is the coalescing filter.



16. Loosen the coalescing filter canister .



17. Remove the canister from the coalescing filter.



18. Loosen filter element nut using a 5/16" nut driver.



19. Retain the top and bottom filter element caps. Discard old filter.



20. Position the top and bottom filter element caps onto the new filter.



21. Position new filter element and caps onto filter tube.



22. Position filter nut (arrow) onto filter.



23. Tighten filter element nut. Do not overtighten.



24. Install the filter canister ...




25. ... and hand tighten.



26. Replace the front panel.



27. Using a coin or screwdriver, rotate each panel lock.

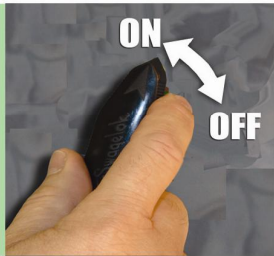

28. Rotate the valve on the instrument panel to "ON".

Branick Industries, Inc.
4245 Main Avenue
Fargo, ND 58103
Phone: 701-281-5900
www.branick.com