



**MODEL 145  
STATIONARY  
AIRSTATION**

**Installation &  
Repair Parts  
Information**



**Installation**

- 1) Remove the unit from shipping carton and inspect for shipping damage.


**NOTE:** Place the unit on a solid, level floor and secure with anchor bolts (not included).

- 2) Attach included air hose to the outlet port on the front of the stand.
- 3) Connect an airline to the air inlet port.
- 4) Plug the inflator into a standard 110/120 v AC outlet.

**Service Parts**

ITEM	QTY	PART NO.	DESCRIPTION
1	1	06-0047	HOSE BRACKET
2	1	09-0018	BLOCKHEAD INFLATOR
3	2	50-0126	5/16-18 X 5/8" SOC BTN HC SCREW
4	2	055-105	5/16-18 SF HEX LOCK NUT
5	2	60-0192	1/4" NPT X 3/4-16 STR BHD FITTING
6	1	60-0193	3/8" TUBE TO 1/4" NPT MALE ELBOW
7	1	60-0194	1/4" NPT M X F 90° FITTING
8	2	60-0231	3/8" X 1/4" NPT 90° SWL ELBOW
9	1	60-0320	CLIP-ON CHUCK (OPEN)
10	1	60-0352	3/8" TB X 1/4" NPT F CONN FITTING
11	1	62-0022	AIR HOSE
12	1	096-013	1/4" NPT BRASS HEX NIPPLE
13	2	108-123	5/16" SAE WASHER
14	1	932-001	IN-LINE FILTER

## Service Parts Diagram

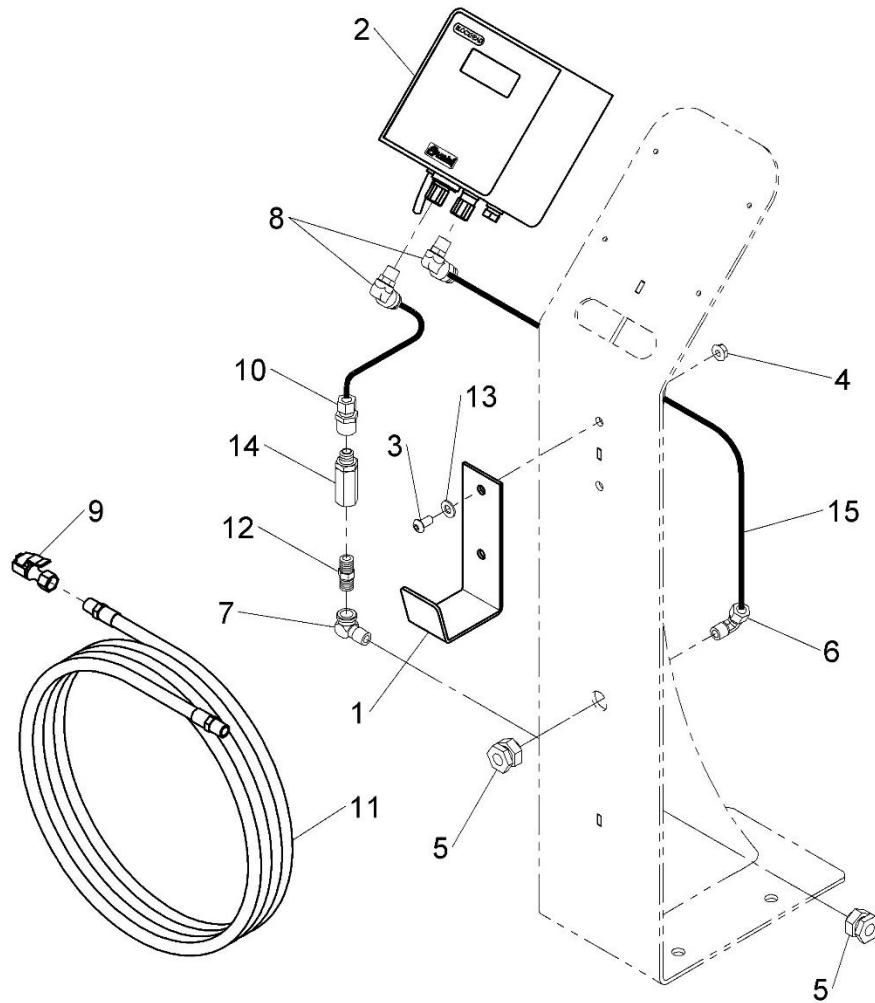

## COMMERCIAL WARRANTY

This product is warranted by BRANICK INDUSTRIES, INC. to the original user-owner against defective materials or workmanship for a period of one year from the date of shipment. During the warranty period, at the discretion of Branick management, if the product is found to be defective, it will be repaired or replaced without charge. For service, contact Branick (800-437-4394) to obtain an RMA. Any product shipped to Branick must have an RMA and proof of original shipment date. The repaired or replacement product will be returned with transportation charges prepaid by Branick.

This warranty does not cover defects in the product caused by ordinary wear and tear, abuse, misuse, overloading, accident (including shipping damage), improper maintenance, alteration, or any other cause not the result of defective materials or workmanship.

REPAIR OR REPLACEMENT IS THE EXCLUSIVE REMEDY FOR DEFECTIVE PRODUCT UNDER THIS WARRANTY. THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANT ABILITY OR ANY IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE OF THIS PRODUCT. BRANICK INDUSTRIES, INC. SHALL NOT BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES.

BRANICK INDUSTRIES, INC. reserves the right to make changes in the design or construction of our products without obligation to incorporate such changes in products already sold and without notice.

Service parts and regular repair service are available from authorized distributors of Branick products, or from:

BRANICK INDUSTRIES, INC.  
4245 Main Ave.  
 Fargo, North Dakota 58103  
Toll Free: 800-437-4394

**Branick**<sup>®</sup>