

COMMERCIAL WARRANTY

This product is warranted by BRANICK INDUSTRIES, INC. to the original user-owner against defective materials or workmanship for a period of one year from the date of shipment. During the warranty period, at the discretion of Branick management, if the product is found to be defective, it will be repaired or replaced without charge. For service, contact Branick (800-437-4394) to obtain an RMA. Any product shipped to Branick must have an RMA and proof of original shipment date. The repaired or replacement product will be returned with transportation charges prepaid by Branick.

This warranty does not cover defects in the product caused by ordinary wear and tear, abuse, misuse, overloading, accident (including shipping damage), improper maintenance, alteration, or any other cause not the result of defective materials or workmanship.

REPAIR OR REPLACEMENT IS THE EXCLUSIVE REMEDY FOR DEFECTIVE PRODUCT UNDER THIS WARRANTY. THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANT ABILITY OR ANY IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE OF THIS PRODUCT. BRANICK INDUSTRIES, INC. SHALL NOT BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES.

BRANICK INDUSTRIES, INC. reserves the right to make changes in the design or construction of our products without obligation to incorporate such changes in products already sold and without notice.

Service parts and regular repair service are available from authorized distributors of Branick products, or from:

BRANICK INDUSTRIES, INC.
4245 Main Ave.
Fargo, North Dakota 58103
Toll Free: 800-437-4394



MODEL 155
WALL MOUNT
AIRSTATION

Installation &
Repair Parts
Information



Installation



- 1) Remove the unit from the shipping carton and inspect for shipping damage.

NOTE: Place the unit on a sturdy wall and secure with appropriate lag screws (not included).

- 2) Pass an airline through the slot at the bottom of the wall plate and connect an airline to the in-line filter.
- 3) Attach the supplied air hoses (Item 9) to the manifold.
- 4) Plug the inflator into a standard 110/120 v AC outlet.

Operation

- 1) Set desired pressure using the + or - buttons.
- 2) Attach hose(s) to tire(s).
- 3) Turn ball valve at manifold to FILL position.
- 4) Automatic inflation will commence.

NOTE: If tire is below 3 psi or unit is in N2P mode inflation will not commence until the  or  button is pushed.

- 5) When complete, buzzer will sound. Turn ball valve to STOP position and remove hose(s) from tire(s).

Service Parts

ITEM	QTY	PART NO.	DESCRIPTION
1	1	09-0018	BLOCKHEAD INFLATOR
2	2	028-307	#10-24 X 1-3/4" PHM SCREW
3	2	055-082	#8-32 NYLON LOCK NUT
4	1	60-0074	3/8" NPT HSH PLUG
5	2	60-0193	3/8" TUBE TO 1/4" NPT MALE ELBOW
6	4	60-0201	CLIP-ON CHUCK (CLOSED)
7	1	60-0233	(4) 1/4" NPT F X (2) 3/8" NPT F MANIFOLD
8	1	60-0340	1/4" FEMALE VENTED BALL VALVE
9	4	62-0022	AIR HOSE
10	1	096-013	1/4" NPT BRASS HEX NIPPLE
11	1	096-039	3/8-1/4 PIPE BUSHING
12	1	932-001	IN-LINE FILTER
13	1	D20-006	3/8" O.D. NYLON TUBE (BLACK)
1	1	09-0018	BLOCKHEAD INFLATOR

Service Parts Diagram

